




800 Poertner Dr. Berea, OH 44017 1-800-648-8022
FR20300 Stramp Clamp

This clamp has been developed to allow the end user to use the original GM mounting bracket under the dash that positions the steering column. The Stamp Clamp allows for full adjustability of the steering column for maximum driving comfort.

- Step 1: Remove the original steering column and mounting bracket from the car.
- Step 2: Take a few measurements to determine where you would like the new steering column to be located . With help from someone position the new column through the firewall and in the final position.
- Step 3: Hold the original mounting bracket from the vehicle around the column so that the mounting holes line up with the frame and determine where the column clamp needs to be placed on the column. Once this is determined place the set screws in the sides of the column clamp as shown. Tighten until the screws are snug but not cutting thru the rubber membrane or you will run the risk of scratching or marring the tube.
- Step 4: Mount the column clamp to the original mounting bracket using the original hardware (5/16-18 bolts) and then mount the bracket to the frame under the dash.

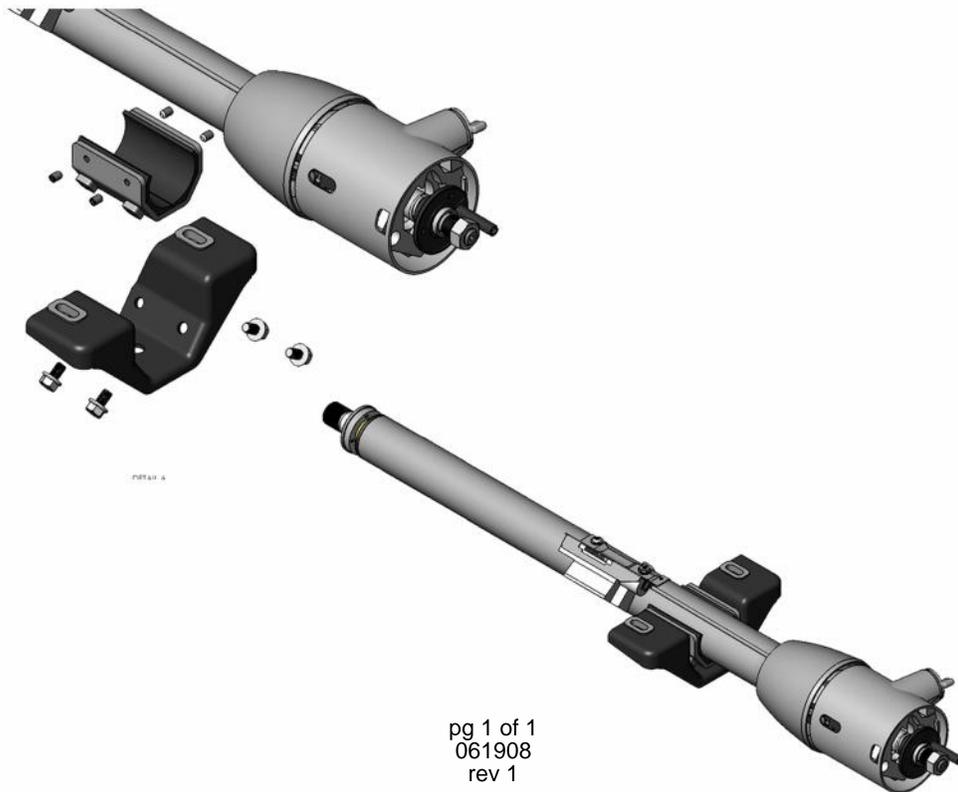


pg 1 of 1
061908
rev 1



800 Poertner Dr. Berea, OH 44017 1-800-648-8022
FR20300 Stramp Clamp

This clamp has been developed to allow the end user to use the original GM mounting bracket under the dash that positions the steering column. The Stamp Clamp allows for full adjustability of the steering column for maximum driving comfort.

- Step 1: Remove the original steering column and mounting bracket from the car.
- Step 2: Take a few measurements to determine where you would like the new steering column to be located . With help from someone position the new column through the firewall and in the final position.
- Step 3: Hold the original mounting bracket from the vehicle around the column so that the mounting holes line up with the frame and determine where the column clamp needs to be placed on the column. Once this is determined place the set screws in the sides of the column clamp as shown. Tighten until the screws are snug but not cutting thru the rubber membrane or you will run the risk of scratching or marring the tube.
- Step 4: Mount the column clamp to the original mounting bracket using the original hardware (5/16-18 bolts) and then mount the bracket to the frame under the dash.

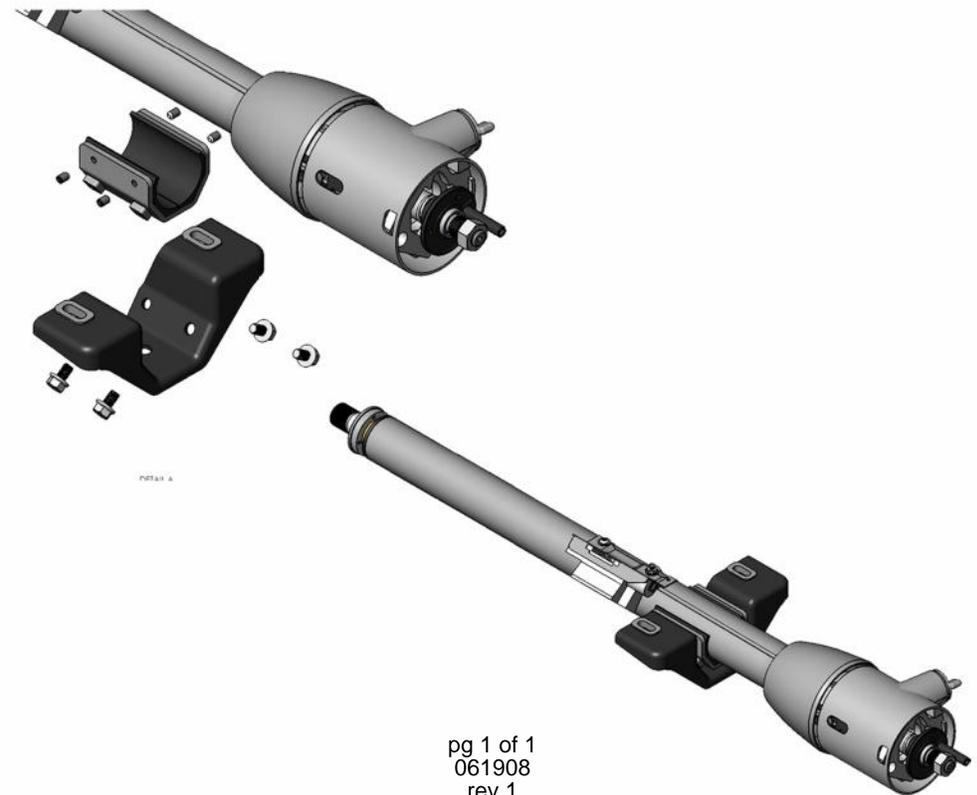

pg 1 of 1
061908
rev 1