

Alternator Cable Installation Kit

Part # FR1061



800 Poertner Drive Berea, OH 44017
1-800-648-8022
www.flamingriver.com

Parts list	
Quantity	Description
5'	Red 1/0 Battery Cable
10'	Black 1/0 Battery Cable
8	Ring Terminal Cable Ends
1	ANL Fuse Holder
1	250 Amp ANL Fuse
4	Red Heat Shrink Tubing
4	Black Heat Shrink Tubing
12	Plastic Cable Ties



DO NOT RETURN THIS PRODUCT!

First contact technical support at: **1-800-648-8022**

Safety first

Warning: Eye protection must be worn when working on batteries.

Remove all jewelry before working on the electrical system.

General

Let the engine cool fully and then remove the negative battery cable with a socket wrench. Reconnect the negative cable(s) last after completing all work.

Grounding


Think of the current path as a circle. The return path (ground path) must be of the same capability as the positive. Any less capable sections of the ground side of the circle will limit your electrical systems performance.

Frame/body connections: Clean all metal surface of any paint or rust with a wire brush or die grinder. Use a conductive corrosion inhibitor available at any electrical parts supply house.


Uni-body frame warning (grounding): Many newer vehicles do not have full frames. Because of seams and adhesive attached body components, additional steps may be required. Choose a location on the sub-frame with a double metal wall. If current issues are observed, move ground connections to different frame components.

GM 2005 through current applications: To prevent interference with the factory battery monitoring system, ONLY add a ground cable from the battery to the alternator. No body or frame grounds should be added. (See option TWO below)


Installation option ONE (typical)

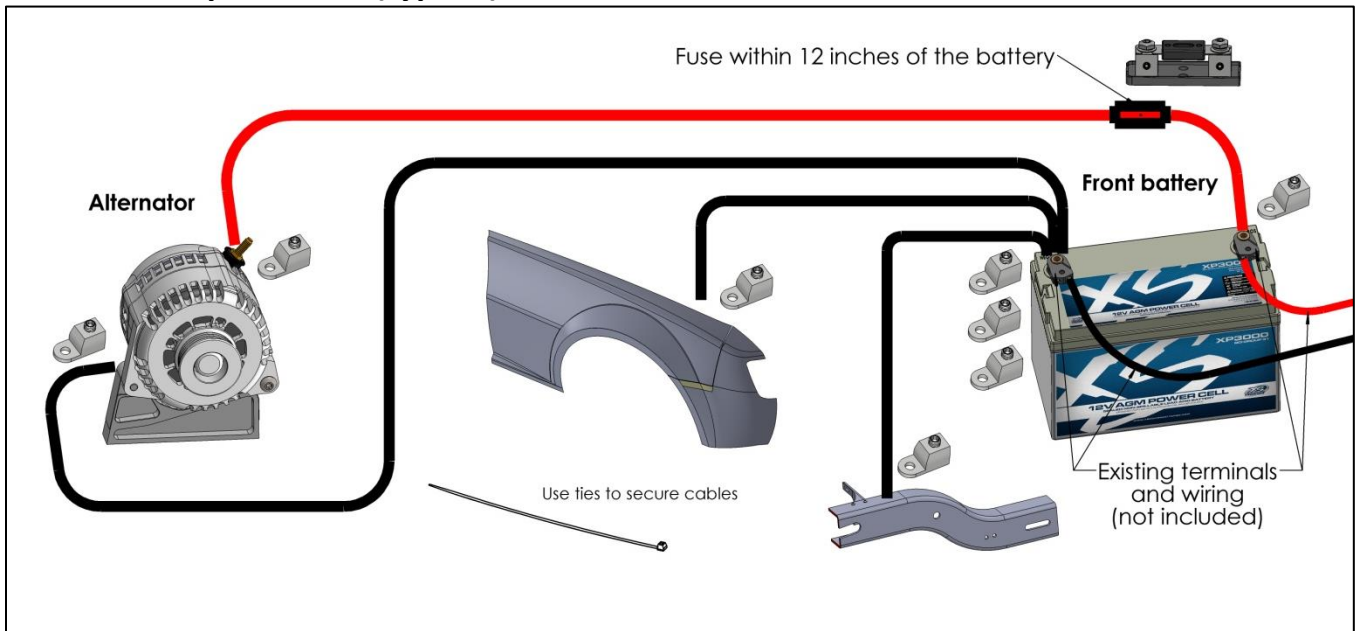

Installation option TWO (GM 2005 through current applications)

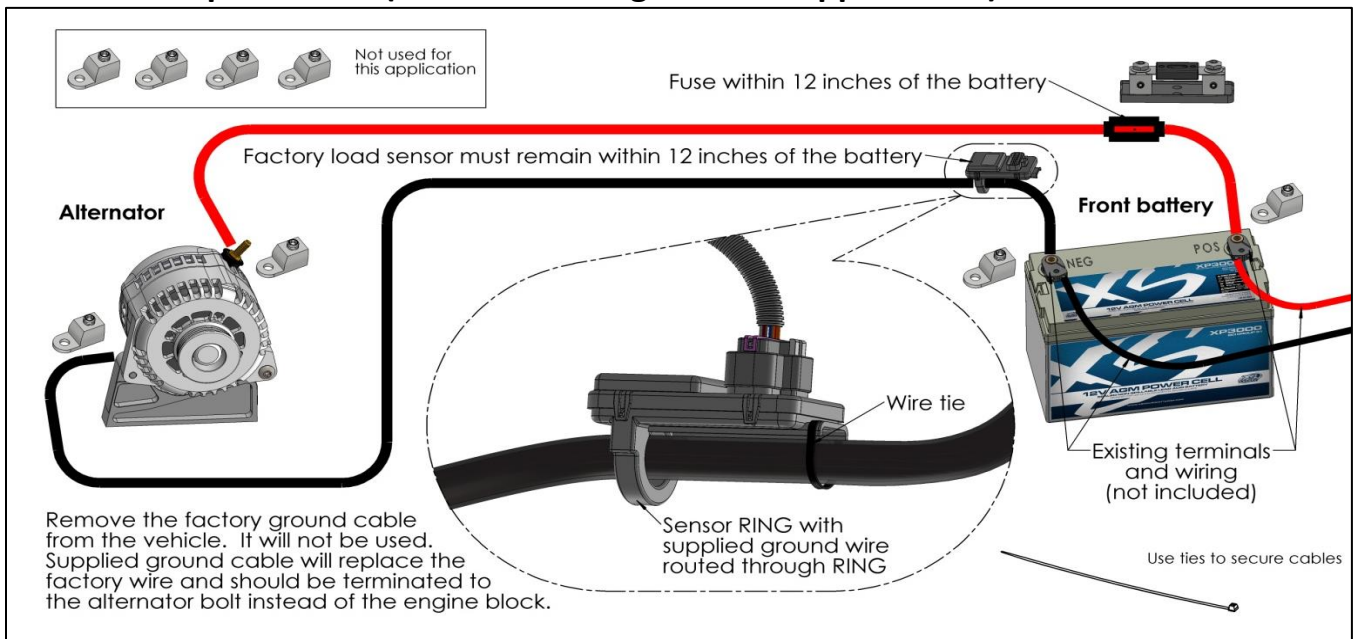


Wire routing and mounting

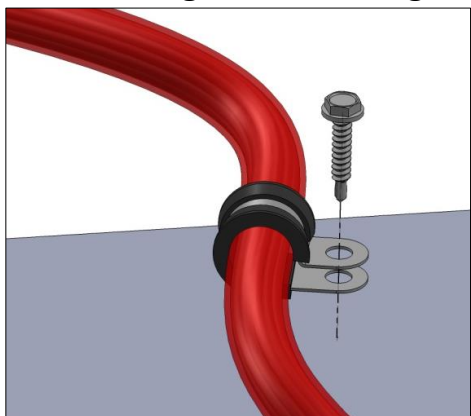


Use screws and insulated mounting clamps (not included) to secure cables to the vehicle.

Warning: It is critical that all electrical wiring is kept at least 12" away from heat sources such as exhaust manifolds and other exhaust components. Also avoid moving components such as cooling fans and suspension components.

Ring terminal assembly (repeat for negative terminals)

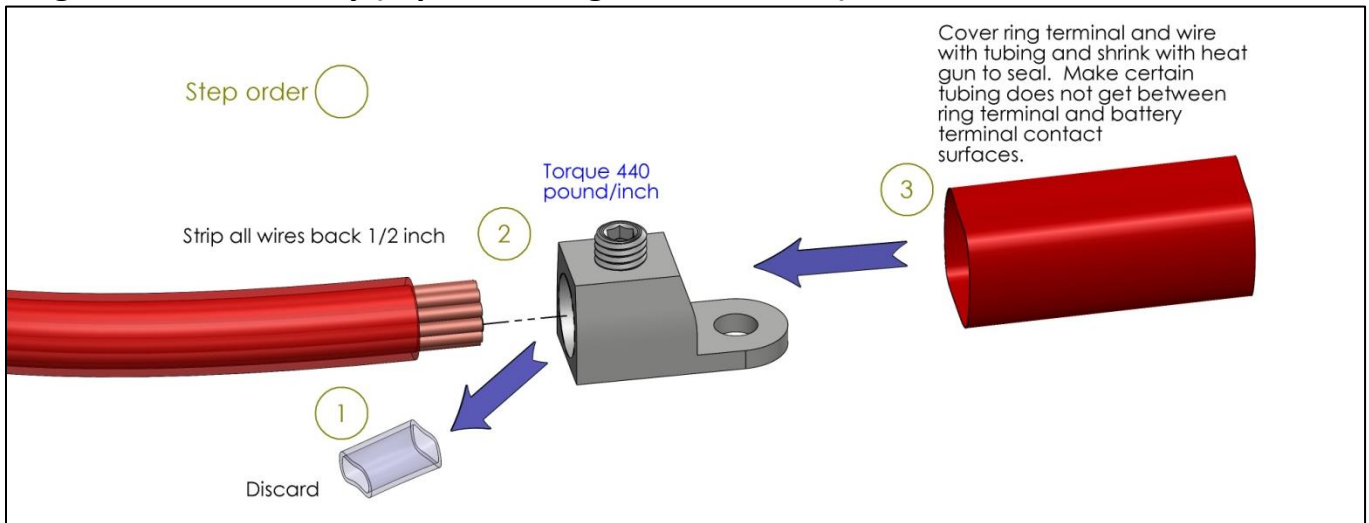

Fuse holder assembly

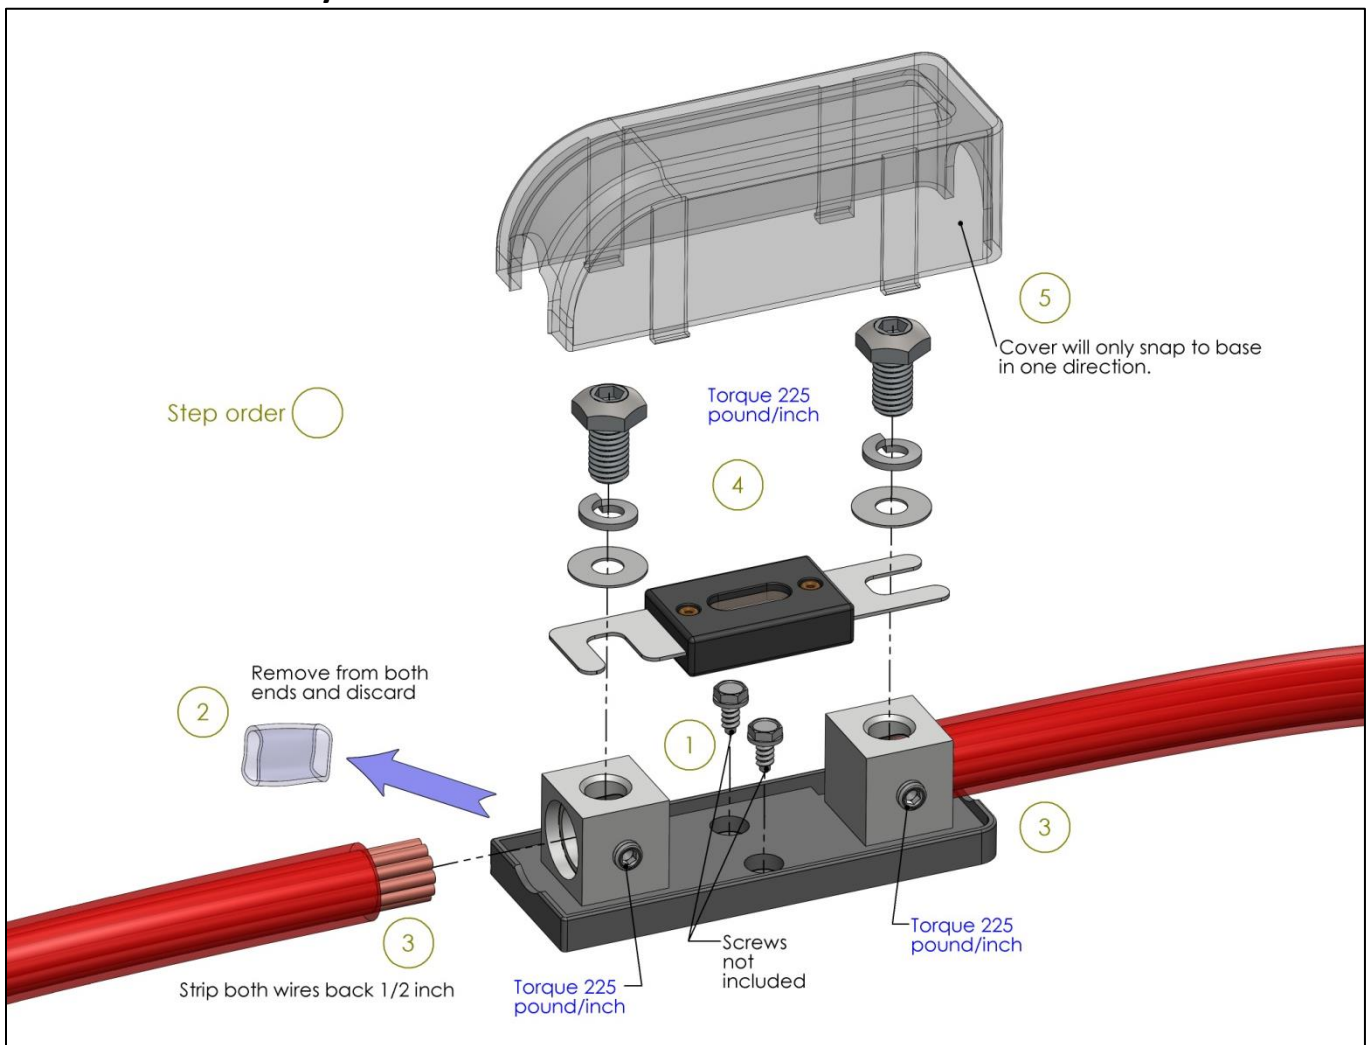

It is recommended a small amount of blue LOCTITE® be used on each ring terminal above screw. Do not get LOCTITE® on electrical connection surfaces because it is nonconductive.

WARRANTY DISCLAIMER: Flaming River's® Limited Warranty

Flaming River® warrants its products to be free from defects in material and workmanship for a period of one (1) year after the date of purchase, except that: All steering columns are warranted for a period of three (3) years from the date of purchase. The Big Switch (part number FR1005) is warranted for a period of three (3) years from the date of purchase, provided that it is not mounted with a steel bracket and provided further that it is adequately protected from environmental conditions. All electrical products other than the Big Switch are warranted for a period of ninety (90) days from the date of purchase. Flaming River's® warranty liability is limited to the replacement of defective products. Flaming River® is not liable for any labor costs associated with any warranty claim, or for any incidental or consequential damages. Improper installation, abuse, racing, and/or modification of the products voids this warranty. No warranty of merchantability or fitness for a particular purpose is made by Flaming River® with respect to any of its products. Warnings and Recommendations It is the customer's responsibility to determine the suitability of a given Flaming River® product for the customer's uses. Likewise, it is the customer's responsibility to install a Flaming River® product. Contact the vehicle manufacturer whenever installing a switch to confirm the appropriateness of using such a switch and the recommended placement of the switch on the vehicle. Use qualified chassis specialists for the installation of all steering related components. Be aware that the installation of certain Flaming River® products may adversely impact a manufacturer's warranty with respect to certain vehicles and other manufactured goods. Flaming River will repair or replace any product found to be defective in material or workmanship. Improper installation, abuse, racing and/or modification VOID THE WARRANTY. Flaming River® is not responsible for any labor costs associated with any warranty.